Remote Hockey Goal Judge Operation

Page 1 of 4

This guide will assist in operation of hockey goal lights with remote switches. Hockey goal lights come standard with switches on a 10' (3 m) cord for activating the red lights when a goal is scored. If the wired switches must be used from farther away, refer to **DWG-290715** for a typical setup with additional cabling and junction boxes.

Instead of – or in addition to – wired switches, NHL model hockey lights feature RC-100/RC-200 wireless handheld control to signal a goal. Refer to **DWG-317405** (RC-100) or **DWG-3640999** (RC-200) and the instructions below.

- For more information about Daktronics hockey goal lights, refer to the **Hockey Goal Lights Installation Manual (ED-13358)**.
- For RC-200 operation and troubleshooting information, refer to the **Remote Control System RC-200** All Sport Operation Manual (DD3572889).
- For legacy RC-100 operation and troubleshooting information, refer to the Remote Control System RC-100 All Sport Operation Manual (ED-15133).

All of the above manuals are available online at www.daktronics.com/manuals.

Power On & Code Selection

Press and briefly hold the **<ON/OFF>** key on the RC-100/RC-200 to power it on. Once the device has been turned on, it will enter the Goal Judge mode, if that was the last mode to be used. If the LCD does not display GOAL JUDGE CONSOLE, press **<ALT>** followed by **<NEW CODE>** and then **<ENTER>**. Type in code "99" and press **<ENTER>**.

ENTER CODE 99 GOAL JUDGE

 
Goal Light Control

Press **<GOAL LIGHT ON/OFF>** to turn the goal lights ON if they are off, or OFF if they are already on. The LCD will display GOAL KEY PRESSED each time the key is pressed.



Power Off Timer Setting

By default, the RC-100/RC-200 units will power off after 45 minutes of inactivity to conserve battery power. For Goal Judge mode, it is recommended that this function be turned off. Press and hold **CONFIG** for 3 seconds to enter configuration mode. Press **CIP** until the LCD displays PRESS ENT TO SET PWR ON TIME and then press **CENTER**. The LCD will show the Power Save status as ON or OFF. Press **CIP** to select OFF and then press **CENTER**.



Troubleshooting – No Server Found

If the RC-100/RC-200 handheld controller does not connect to the Base Station in the goal light, the LCD will display NO SERVER FOUND ON CHANNEL NN, where "NN" equals the current channel number. This may indicate that the goal light is not powered on or the radio channel settings do not match. Ensure the goal lights have power and that the RC-100/RC-200 is no more than 500' (152 m) away from them, with a clear line-of-sight in between.

- Press **<ENTER>** to retry the connection (if the handheld was just moved in range or the Base Station configuration has changed).
- Press **<CLEAR>** to set the channel number to the same channel as the Base Station and retry.



